


For all non-disposer installations in stainless steel Perfect Drain<sup>™</sup> sinks.

## STEP 1

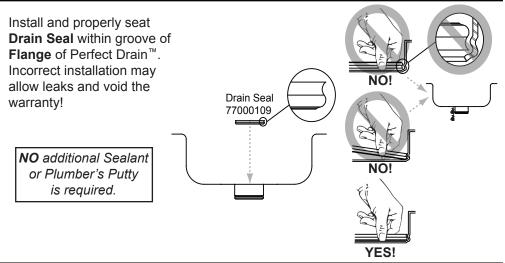

## STEP 2

Properly seat **Drain Body** into Perfect Drain.

Place Gasket over Perfect Drain<sup>™</sup>.


Install **Housing** over Perfect Drain<sup>™</sup>.

Thread Lock Nut onto Drain Body.

Place Poly Washer on Tailpiece.

Install **Tailpiece Assembly** onto **Drain Body** with **Coupling Nut**.

Check for leaks and place **Strainer Basket** into **Drain Body**.

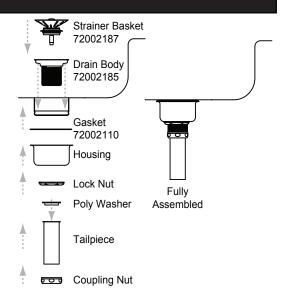

## BE CAREFUL TO NOT OVER TIGHTEN THE FITTINGS.

In keeping with our policy of continuing product improvement, Elkay reserves the right to change product specifications without notice. Please visit elkay.com for most current version of Elkay product specification sheets. This specification describes an Elkay product with design, quality, and functional benefits to the user. When making a comparison of others producers offerings, be certain these features are not overlooked.

Zurn Elkay 1333 Butterfield Road, Suite 200 Downers Grove, IL 60515 ©2024 Zurn Elkay elkay.com PART NO. 74180340 Rev: 03/24