

Halsey Taylor®

Owners Manual

OVL™ Series Water Coolers Refrigerated Fountains with Back Panel



Fig. 1 – OVL-II ER



Fig. 2 – OVL-II SR



Fig. 3 – OVL-II SER



Fig. 4 – OVL-II ESR

Figure	Model	Description
1	OVL-II ER	OVL-II Series - Extended Reach
2	OVL-II SR	OVL-II Series - Standard Reach
3	OVL-II SER	OVL-II Series - Dual Installation
4	OVL-II ESR	OVL-II Series - Dual Installation

INSTALLER

⚠ CAUTION: Review these instructions before beginning installation. Be sure that installation conforms to all plumbing, electrical and other applicable codes.

⚠ WARNING: When installation is complete, ensure these instructions are left in the plastic bag provided inside the installed unit for future reference.

⚠ WARNING: Service to be performed by authorized service personnel only.

NOTE: It is common practice to ground electrical hardware such as telephones, computers and other devices to available water lines. This can, however, cause electrical feedback in the plumbing circuit, which results in an "electrolysis" effect occurring in the fountain. This may result in water which has a metallic taste to it or has a noticeable increase in the metallic content of the water.

When inspecting plumbing circuit, remember the line may be grounded some distance from the installation, and may occur outside the building or area in which the unit is being installed.

This condition can be avoided (in most cases) by using recommended materials during installation. Any drain fittings provided by the installer should be made of **plastic** which will electronically isolate the fountain from the remainder of the building's plumbing circuits.

Patent zurn-elkay.com/patents

⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

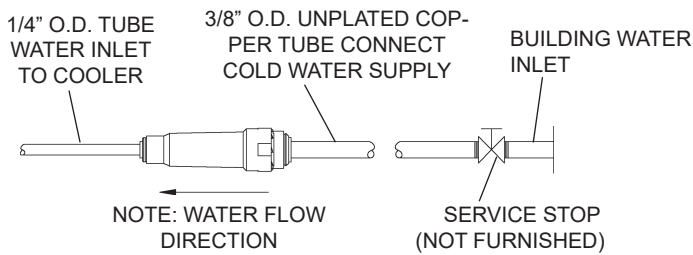


Figure 5 – Water Supply Connections

Installation Package

The components for installation are packed in three separate boxes, regardless of the type of unit being installed. The boxes contain the following:

- Box No. 1: Wall Frame(s)
- Box No. 2: Remote Chiller, SJ8
- Box No. 3: Fountain(s), Arm(s) and Panels

Additional materials, as noted in the Parts List, are also shipped in these boxes.

Parts List

Number Required

Item	Part No.	Description	OVL-II ER	OVL-II SR	OVL-II SER	OVL-II ESR	See Fig.
1	26990C	Bottom Cover - Standard Reach	-	1	1	1	27
	26988C	Bottom Cover - Extended Reach	1	-	1	1	27
2	55836C	Push Arm Actuator Plate	1	1	2	2	23
	55991C	Push Arm Actuator Plate - A.G.	1	1	2	2	23
3	51546C	Bubbler	1	1	2	2	27
	45396C	Bubbler - A.G.	1	1	2	2	27
		Bubbler - EasyFlex (option)	1	1	2	2	-
	98481C	Kit - VR Bubbler-Smart Flow™	1	1	2	2	26
4	1000001791	Kit - VR Bubbler Nipple/Gaskets	1	1	2	2	26
	1000002705	Kit - Bubbler Nipple/Gaskets	1	1	2	2	26
5	160270508640	Strainer Plate - S.S.	1	1	2	2	27
	45400C	Strainer Plate - A.G.	1	1	2	2	23
6	101570540560	Drain Gasket	1	1	2	2	27
7	51575C	Packing Ring	1	1	2	2	27
8	110346220550	Drain Nut	2	2	4	4	27
9	101637451550	Friction Ring	1	1	2	2	27
10	161637308640	Drain Plug - S.S.	1	1	2	2	27
	45398C	Drain Plug - A.G.	1	1	2	2	27
11	45683C	Drain Tube	1	-	1	1	27
	45682C	Drain Tube	-	1	1	1	27
12	100023340560	Waste Tube Gasket	1	1	2	2	27
13	161570808550	Slip Nut	1	1	2	2	27
14	61314C	Regulator	1	1	2	2	25
15	1000002145	Kit - Regulator Holder (5 Pack)	1	1	2	2	25
16	27006C	Basin - S.S.	1	1	2	2	23,26,26
	27342C	Basin - A.G.	1	1	2	2	27
		Basin - Galaxy Gray Marblyte (option)	1	1	2	2	-
		Basin - Golden Sand Marblyte (option)	1	1	2	2	-
		Basin - Black Onyx Marblyte (option)	1	1	2	2	-
17	27000C	Basin Liner - S.S.	1	1	2	2	27
	27344C	Basin Liner - A.G.	1	1	2	2	27
18	70861C	Screw - #10-24 X 2.00	4	4	8	8	27
19	55840C	Top Plate - Actuator	1	1	2	2	23
20	55839C	Bottom Plate - Actuator	1	1	2	2	23
21	27338U	Extended Reach Arm - S.S.	1	-	1	1	27
	27338C	Extended Reach Arm - A.G.	1	-	1	1	27
	27340U	Standard Reach Arm - S.S.	-	1	1	1	27
	27340C	Standard Reach Arm - A.G.	-	1	1	1	27
22	28328C	Regulator Mounting Bracket	1	1	2	2	24

Parts List Continued

Item	Part No.	Description	OVL-II ER	OVL-II SR	OVL-II SER	OVL-II ESR	See Fig.
23	1000002027	Kit - Nut-Retaining (5 Pack)	1	1	2	2	
24	1000001926	Kit - Hex Nut-Unplated (4 Pack)	1	1	2	2	
25	27008C	Reaction Bracket	1	1	2	2	
26	70856C	Screw - #10-24 x .38 PHMS	1	1	2	2	
27	70854C	Rod - Pivot	1	1	2	2	
28	50198C	Bushing Snap	4	4	8	8	
29	0000001323	Kit - Pivot Bracket/Bushing/Bumper/Rod	1	1	2	2	
30	28327C	Arm - Regulator Activating	1	1	2	2	
31	28326C	Arm - Regulator Adjustment	1	1	2	2	
32	22797C	Upper Panel (OVL-II ER) - S.S.	1	-	-	-	
	27886C	Upper Panel (OVL-II ER) - A.G.	1	-	-	-	
	22799C	Upper Panel (OVL-II SR) - S.S.	-	1	-	-	
	27888C	Upper Panel (OVL-II SR) - A.G.	-	1	-	-	
	26958C	Upper Panel (OVL-II SER) - S.S.	-	-	1	-	
	27890C	Upper Panel (OVL-II SER) - A.G.	-	-	1	-	
	22795C	Upper Panel (OVL-II ESR) - S.S.	-	-	-	1	
	27892C	Upper Panel (OVL-II ESR) - A.G.	-	-	-	1	
	1000003515	Upper Panel (OVL-II ER-GRN) S.S.	1	-	-	-	
	1000003517	Upper Panel (OVL-II SER-GRN) S.S.	-	-	1	-	
	1000003518	Upper Panel (OVL-II ESR-GRN) S.S.	-	-	-	1	
33	26833C	Lower Panel (OVL-II ER/SR) - S.S.	1	1	-	-	
	27894C	Lower Panel (OVL-II ER/SR) - A.G.	1	1	-	-	
	27026C	Lower Panel (OVL-II SER/ESR) - S.S.	-	-	1	1	
	27896C	Lower Panel (OVL-II SER/ESR) - A.G.	-	-	1	1	
34	55996C	Strainer (Supplied with Chiller)	1	1	1	1	
35	1000002162	Kit - Union-1/4" (3 Pack)	1	1	1 If Filtered	1 If Filtered	
36	1000001994	Kit - Tee-1/4" (3 Pack)	-	-	1	1	
37	56092C	Poly Tubing - 1/4" (Cut To Length)	1	1	1	1	

NS = Not Shown

NOTE: S.S. means Stainless Steel
A.G. means Aztec Gold
N-S means not shown

Note: Danger! Electric shock hazard. Disconnect power before servicing unit.

Uses HFC-134A refrigerant

Models

OVL-II SER – OVL-II ESR



Figure 6 – OVL-II SER Rough-In

1. **Cut a rectangular wall opening** 37-1/2" (953 mm) W x 37-3/4" H (959 mm) and 4-1/2" (114 mm) above the floor line (see Figure 7). The dimensions are required to obtain proper rim and bubbler heights for compliance with ANSI standard A117.1.

2. **Reinforce the wall opening** on all sides to adequately support the water fountain. This reinforcement must support up to 150 lbs. W load and provide a means for securing the frame assembly in place.

NOTE: Building construction must allow for adequate air flow on both sides and top of remote chiller unit a minimum of 4" (102 mm) is required.

3. **Install plumbing and electrical rough-ins.** A junction box for a (3) wire, 10 amp branch circuit is provided on the inside of the chiller. (Standard 120 Volts, 60 Hz, and single phase.)

4. **Remove frames and related hardware** from packaging. Release the two shelf rods by cutting cable ties. Attach the two frames together through the upright supports with (4) 5/16" x 3/4" (19 mm) long bolts and nuts (provided). Tighten securely.

MAKE SURE FRAME CONFIGURATION MATCHES THE COOLER TO BE INSTALLED

**REVERSED CONFIGURATION:
HIGHER UNIT ON THE RIGHT**

5/16" SCREWS OR BOLTS
(12 REQ'D-NOT FURNISHED)

FRAME

5/16" HEX NUT
(4 REQ'D - PROVIDED)
P/N 111577343890

SCREWS OR BOLTS
(NOT PROVIDED)

INSTALL (3) SCREWS
(P/N 111008343890) IN FRAME
BEFORE INSTALLING IN OPENING

**STANDARD CONFIGURATION:
HIGHER UNIT ON THE LEFT**

HOOK RODS (2)
P/N 101567443730

BOLT FRAMES TOGETHER
WITH 5/16" X 3/4" (19mm) BOLTS
(4 REQ'D- PROVIDED)
P/N 111577243890

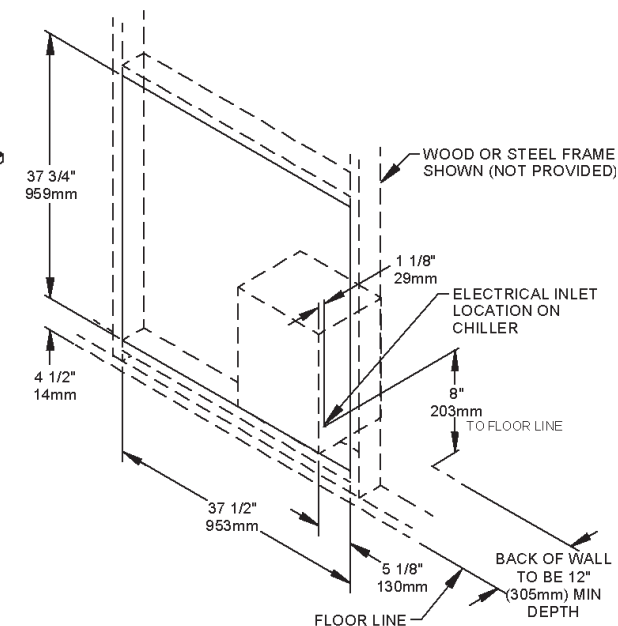



Figure 7 – Rough-In Assembly
Dual-Station Mounting Frames

5. **Install the frame assembly squarely in wall opening** with frame upright support edges flush with the finished wall face. Secure the frame to the wall through holes with (12) 5/16" bolts or screws (not provided). Tighten securely.

NOTE: Be sure that frame is squared in location. Do not use less than required screw quantity and size.

6. **Attach the chiller shelf support rods** to the right side of the frame uprights at the second set of holes counting from the bottom and to the shelf at the (2) side holes. Line up the other shelf holes with the frame bottom holes and fasten the assembly to the wall opening using appropriately sized screws or bolts and nuts (not provided).

MODEL OVL-SER SHOWN

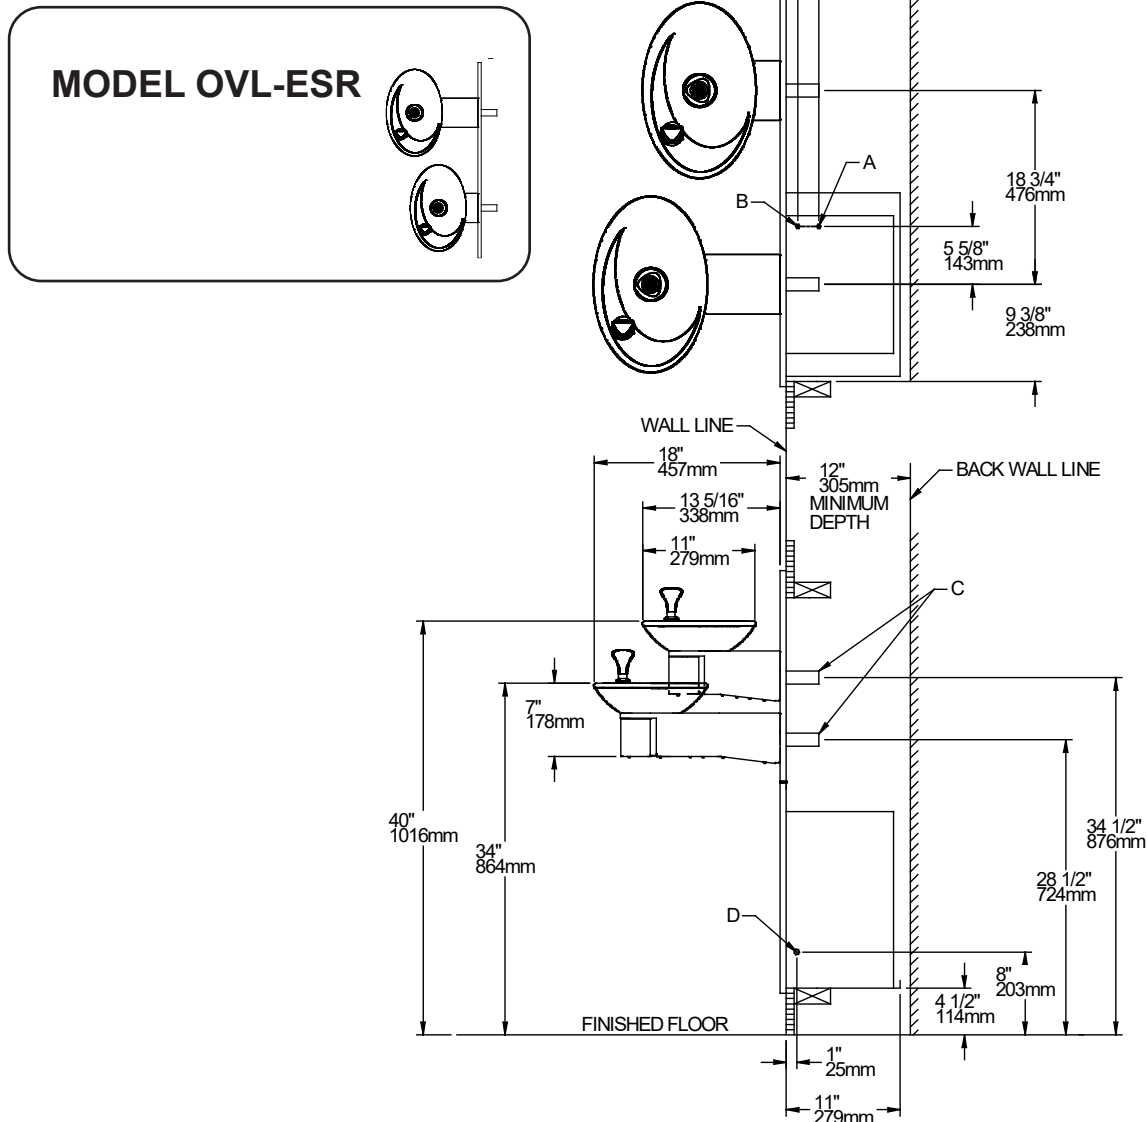

Legend


- A = 1/4" O.D. Tube - Water Outlet Connection
- B = 3/8" O.D. Tube - Water Inlet Connection
- C = 1-1/4" O.D. Waste Tube
- D = Electrical Inlet on Chiller

Figure 8 – OVL-II SER/OVL-II ESR Rough-In Dimensions



Figure 9 – OVL-II ER/OVL-II SR Rough-In

1. **Cut a rectangular wall opening** 18-3/4" (475 mm) W x 37-3/4" H (959 mm) and 4-1/2" (114 mm) above the floor line (see Figure 10). The dimensions are required to obtain proper rim and bubbler heights for compliance with ANSI standard A117.1.
 2. **Reinforce the wall opening** on all sides to adequately support the water fountain. This reinforcement must support up to 150 lbs. static load and provide a means for securing the frame assembly in place.
- NOTE:** Building construction must allow for adequate air flow on both sides and top of remote chiller unit. Minimum of 4" (102 mm) is required.
3. **Install plumbing and electrical rough-ins.** A junction box for a (3) wire, 10 amp branch circuit is provided on the inside of the chiller. (Standard 120 Volts, 60 Hz, and single phase.)
 4. **Remove frame and related hardware** from packaging. Release the two shelf rods by cutting cable ties.

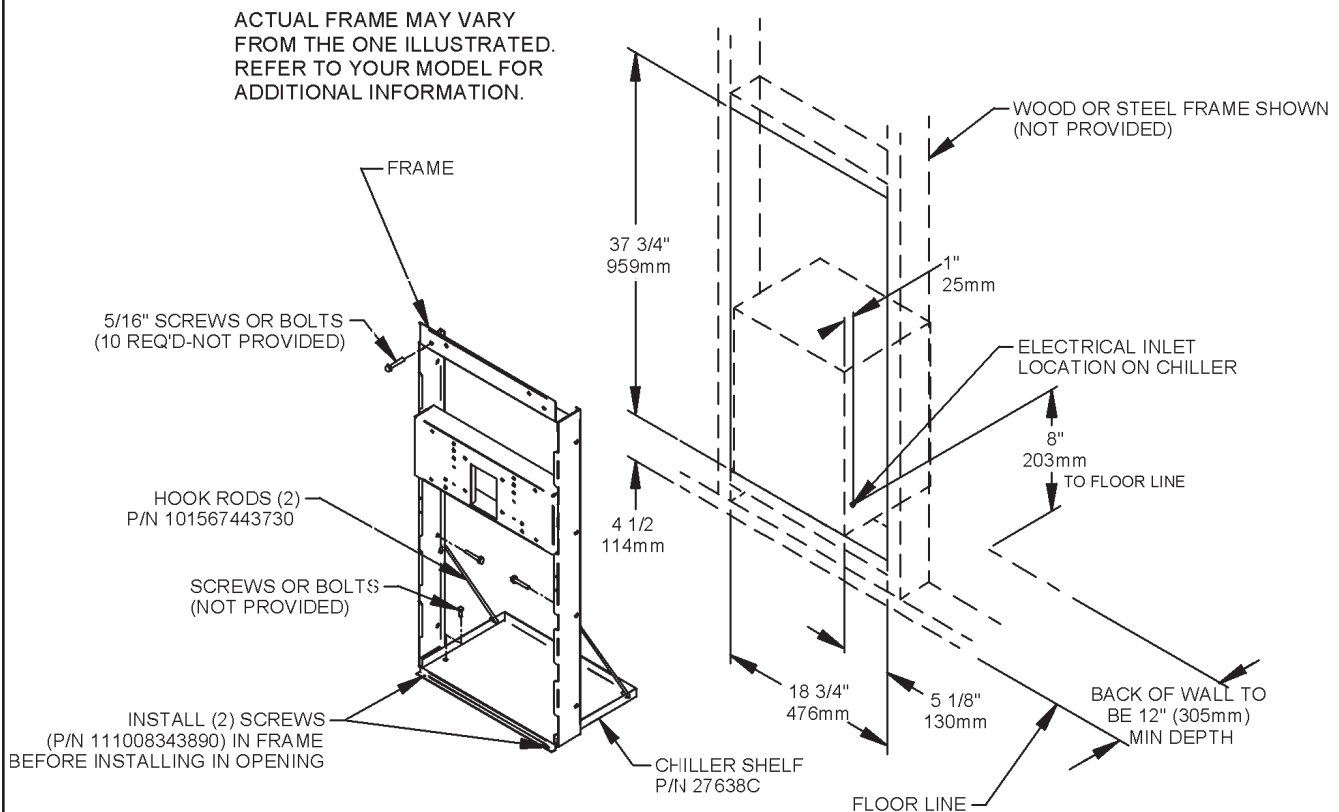


**Figure 10 – Rough-In Assembly
Single-Station Mounting Frames**

5. **Install the frame squarely in wall** opening with frame upright edges flush with the finished wall surface. Place shelf inside frame and line up the (2) holes on each. Insert loose ends of rods into holes on sides of shelf panel. Using appropriately sized screws or bolts (not provided), fasten the shelf and frame to the bottom


of wall opening. Secure the frame sides and top to the wall opening using (10) 5/16" bolts or screws (not provided).

NOTE: Be sure that frame is squared in location. Do not use less than the required screw quantity and size.

MODEL OVL-ER

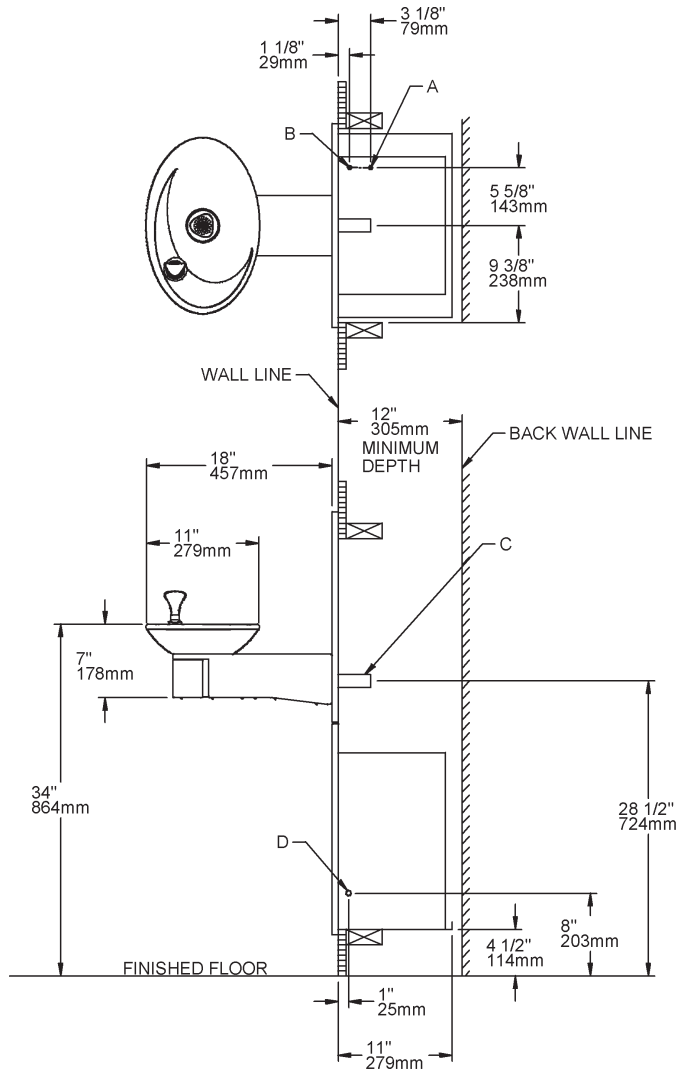

MODEL OVL-SR

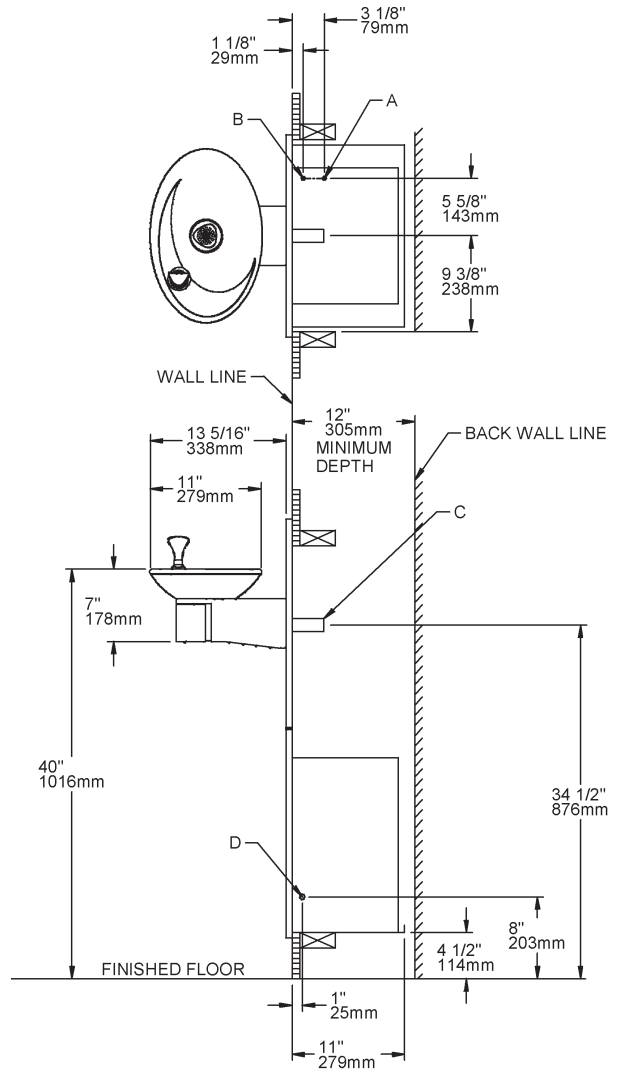

Legend

A = 1/4" O.D. Tube - Water Outlet Connection

B = 3/8" O.D. Tube - Water Inlet Connection

C = 1-1/4" O.D. Waste Tube

D = Electrical Inlet on Chiller

Figure 8 – OVL-II SER/OVL-II ESR Rough-In Dimensions

REQUIRED TOOLS AND MATERIALS

These tables show special tools and/or additional materials (not provided) which are necessary to complete installation of these units:

Special Tools

Item	Description	Quantity
	NONE	

Additional Materials

Item	Description	Quantity
1	Unplated copper inlet pipe	
2	Service Stop	

OVL-II ER/SR/SER/ESR INSTALLATION


1. **Assemble** and place frame in wall as shown on preceding pages.
2. **Install chiller:** Remove front panel of chiller. **Remove and discard cardboard inner pack from between compressor and side panel.** Slide chiller onto the shelf and position it to the left within the guides on the shelf.

NOTE: Building construction must allow for adequate air flow on both sides, top and back of chiller. A minimum of 4" (102mm) on both sides and top is required. See chiller installation for additional instructions.

**Figure 12 – Chiller Installation**

3. **Make water supply connections.** Inlet port is marked on the chiller (1/4" O.D. copper tube). Bend the copper tube (provided) at an appropriate length from the chiller to opening in frame. Install the in-line strainer (provided with chiller) by pushing it in until it reaches a positive stop, approximately 3/4" (19mm) on the marked chiller inlet port. Attach an unplated and deburred copper water inlet line and a service stop (not provided) to the chiller. Turn on the water supply and flush the line thoroughly.
4. **Hang the upper panel on the mounting frame hanger.** Align holes in the panel with the holes in the mounting frame. Be sure that panel is engaged with hanger at top of frame before releasing it.

5. **Install fountain.** Remove access cover plate on underside of fountains and **SAVE** the screws. Mount the fountains to the upper panel and frame with (4) 5/16" x 3/4" (19mm) long bolts and nuts provided. Tighten securely.

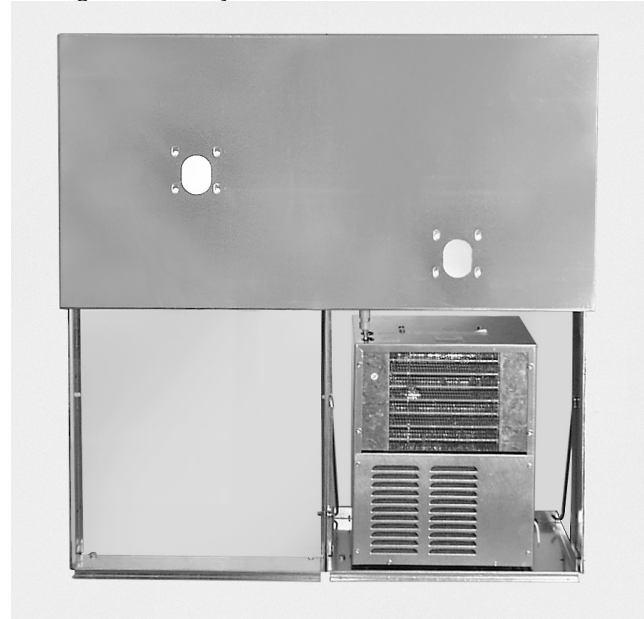**Figure 13 – Upper Panel Installation**

NOTE: With OVL-II SER or OVL-II ESR models, the standard reach fountain must be mounted at the upper position on panel.

**Figure 14 – Fountain Installation**

6. **Connect the fountain drain waste tube to the building sanitary sewer system.** Connection should be made in compliance with local plumbing code requirements. (Note: Plumbing trap is not included with the fountain).
7. **Make connection between remote chiller outlet tube and fountain(s).** Outlet port is marked on the chiller (1/4" O.D. copper tube). Install a 1/4" union/tee (provided) on the marked chiller outlet port. Insert the 1/4" poly tubing coming from the fountain(s) into the union tee. Turn on water supply and check for leaks.



CAUTION: **DO NOT SOLDER** tubes while inserted into the strainer as damage to o-rings may result.

8. **These products are designed to operate on 20-105 PSI supply line pressure.** If inlet pressure is above 105 PSI, a pressure regulator must be installed in the supply line.



CAUTION: Used by connecting these products to a supply line with pressure lower than 20 PSI or higher than 105 PSI **IS NOT** covered under warranty.

9. **Make electrical connections to the chiller.** See chiller instructions.
10. **Check stream height from bubbler.** Stream height is factory set at 35-40 PSI. If supply pressure varies greatly from this, remove items 2, 19, and 20 (push arm and the bottom and the top actuator plates – Figure 23) by removing the screws holding assembly together and adjust the screw on the regulator (Item 14 – Figs. 24 & 25). Clockwise adjustment will raise stream height and counterclockwise movement will lower stream height. For best adjustment, stream height should be approximately 1-1/2" (38mm) above the bubbler guard. (See Figure 16).
11. **Mount lower panel.** Loosen the two (2) #10-24 x 5/8" (16mm) screws at frame bottom lip. Slide upper tongue of lower panel under lower edge of already installed upper panel. Tighten previously loosened screws securely.
12. **Replace bottom access panel** to fountain basin using screws provided. Tighten securely.

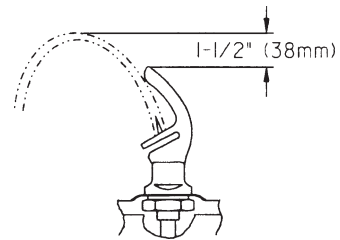


Figure 16 – Stream Height

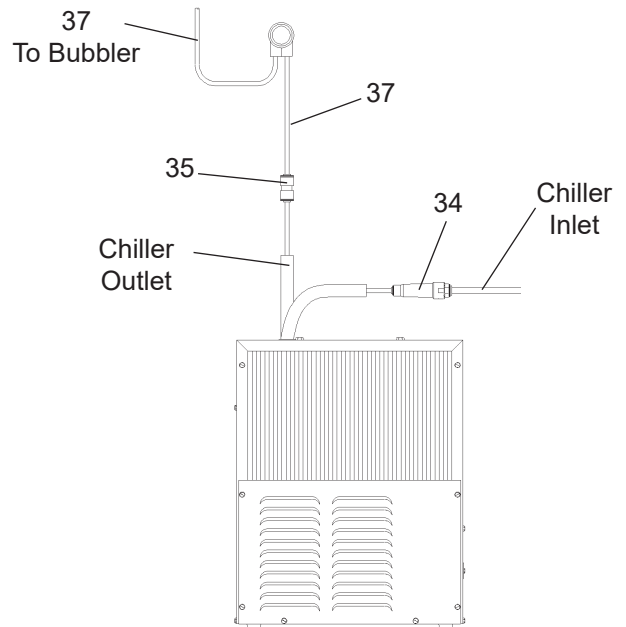


Figure 17 – OVL-II ER/SR Tube Routing



Figure 15 – Lower Panel Installation



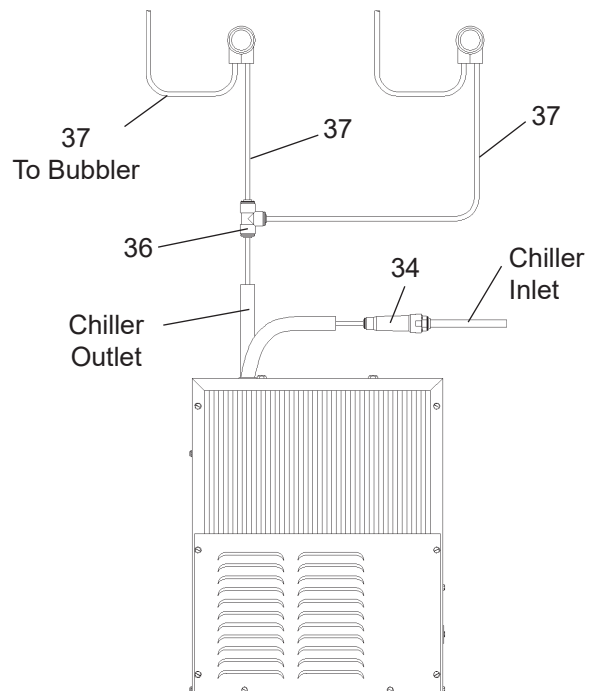



Figure 18 – OVL-II SER/ESR Tube Routing

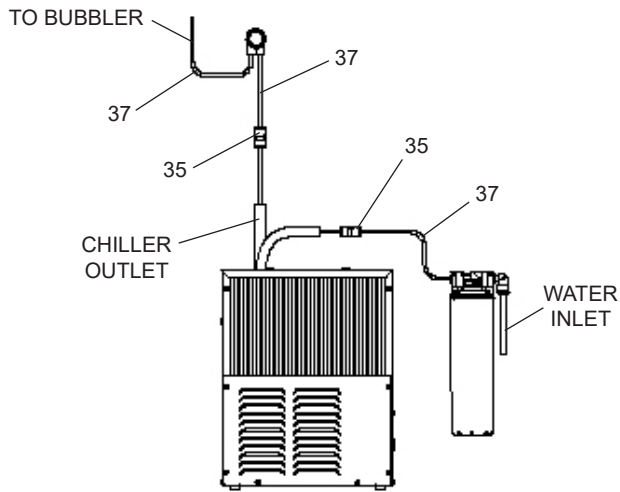

**OVLERGRN
Tube Routing
Figure 19**

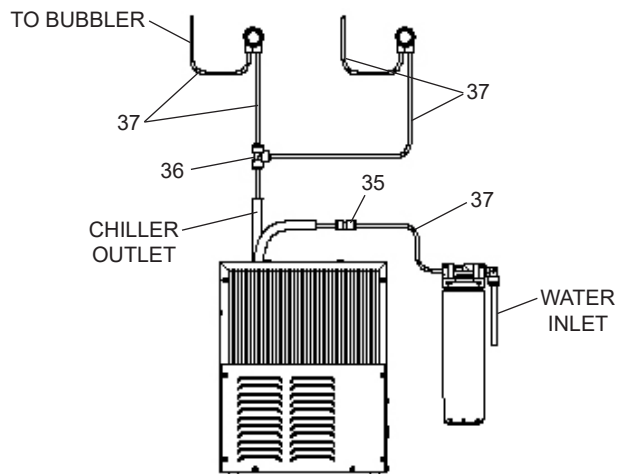

**OVLSERGRN / OVLESRGRN
Tube Routing
Figure 20**

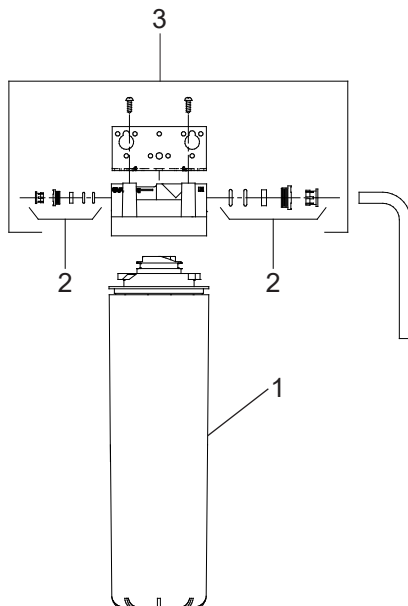

**Water Filter Detail
Figure 21**

1. **Install chiller:** Remove front panel of chiller. **Remove and discard cardboard inner pack from between compressor and side panel.** Slide chiller onto the shelf and position it to the left as per dimensions in Figure 1.

Note: Building construction must allow for adequate air flow on both sides, top and back of chiller. A minimum of 4" (102mm) on both sides and top is required. See chiller installation for additional instructions.

2. **Make water supply connections.** Install a shut-off valve and union connection to building water supply (valve and union not provided). Turn on water supply and flush the line thoroughly.
3. **OVLERGRN:** Make connection between remote chiller and building supply line. Inlet port is marked on the chiller (1/4" O.D. copper tube). Bend the copper tube (provided) at an appropriate length from chiller to opening in frame. Install the in-line strainer (provided with chiller) by pushing it until it reaches a positive stop, approximately 3/4" (19mm) on the marked chiller inlet port. Connect building supply line to strainer. (See Figure 19)

Caution: DO NOT SOLDER tubes inserted into the strainer as damage to o-rings may result.

4. **OVLSERGRN & OVLESRGRN:** Mount filter head assembly to side of chiller (See Figure 20). Make connections between filter and building supply line (3/8" O.D. tube not provided). Inlet port is marked on the chiller (1/4" O. D. copper tube). Install a 1/4" x 1/4" union (provided) on the marked chiller inlet port. Insert the 1/4" poly tubing (provided) into the fitting on filter and connect the union to the chiller. (See Figure 20)

Caution: DO NOT SOLDER tubes inserted into the strainer as damage to o-rings may result.

WATERSENTRY® FILTER PARTS LIST (See Fig. 21)		
ITEM NO.	PART NO.	DESCRIPTION
1	55897C	Filter Assy-1500 Gal.
2	98926C	Kit-Filter Head Fitting includes John Guest Ftgs & 3/8" Elbow Fitting
3	51469C	Assy -Filter & Bracket includes Fltr Head/Mtg Bkt/ John Guest Ftgs/Screws

TROUBLESHOOTING & MAINTENANCE

Orifice Assembly: Mineral deposits on orifice can cause water flow to spurt or not regulate. Mineral deposits may be removed from the orifice by poking with a small round file not over 1/8" diameter, or using a small diameter wire.

CAUTION: DO NOT file or cut orifice material.

Stream Regulator: If orifice is clean, regulate flow as in Step 10, Page 9 of the installation instructions. If replacement is necessary, see parts list for correct regulator part number.

CAUTION: To preserve the quality and keep this AZTEC GOLD finish clean and spot free, clean this surface with only mild detergent or window cleaner and polish with a soft cloth. DO NOT use any abrasive cleaners or harsh chemicals. They WILL damage the finish!

Actuation of Quick Connect Water Fittings: Cooler is provided with lead-free connectors which utilize an o-ring water seal. To remove tubing from the fitting, relieve water pressure, push in on the gray collar while pulling on the tubing. (See Figure 22) To insert tubing, push tube straight into fitting until it reaches a positive stop (approximately 3/4").

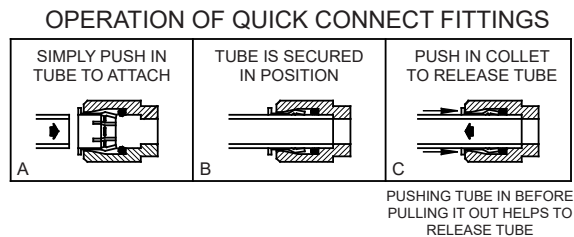


Figure 22 – Quick Connect Fittings

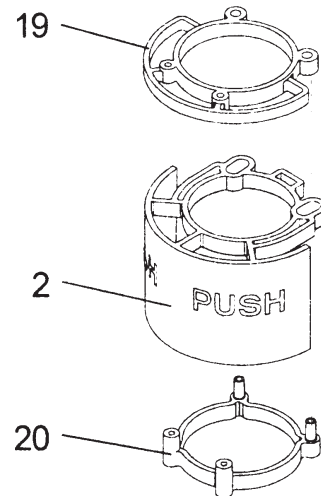


Figure 23 – Push Arm Mechanism

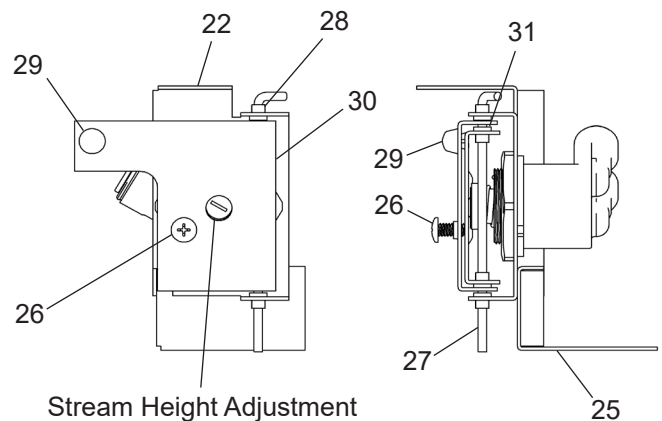


Figure 24 – Regulator Mounting Mechanism

Page 12